

3. Fit roof rack accessory 2. Read through instruction before installing 4. Check and recheck all fasteners are secure

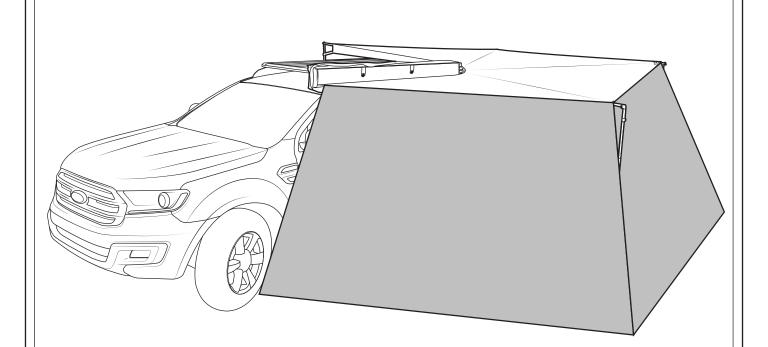

Note: Guy ropes must always be used when the BATWING awning is open This kit is to be used in conjunction with the Rhino-Rack Batwing Awning

Parts Lists

Item	Component	Qty	Part No.
1	Foxwing Zippered Extension	1	31112
2	Poles	2	SP265
3	Guy Rope	2	C910
4	Metal Peg	3	C909
5	Fitting Instruction	1	R189

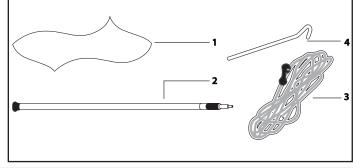

Tools Required:

Mallet.

Please remove BATWING Awning and crossbars when putting vehicle through an automatic car wash.

Note for Dealers and Fitters:

It is your responsibility to ensure these fitting instructions are given to the end user or client

Rhino-Rack, 22 Hanson PI, Eastern Creek NSW 2766, Australia

(02) 8846 1900

rhinorack.com.au

Document No: R189 Prepared By: K.Everett

Authorised By: N.Clarke

Issue No: 05

Issue Date: 12/03/2019

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended

31112 Rhino-Rack BATWING Tapered Extension

Fitting Instructions 2.6 metres 2.3 metres 3.8 metres

